

**EVALUATION KIT
AVAILABLE**

TT-MC1 series


(TT-MC1a, TT-MC1b)

GENERAL DESCRIPTION

TT-MC1 is a high-performance OEM receiver series operating at 1090MHz. It is based on the proven FPGA-In-The-Loop™ technology, which is a unique combination of a multi-core processor and FPGA. The patented solution allows high-speed RF data processing with significantly reduced number of electronic components. Simultaneous miniaturization of the module and its OEM nature open a wide range of possible applications. The basic version of TT-MC1 offers the possibility of receiving and decoding ADS-B and Mode-A/C/S in different modes. The analysis of the power/quality of the RF signal and the use of time stamps facilitates the implementation of multilaterations, and the fast UART interface allows for the simple integration of the module with the user's system. In addition, large reserves of computing power open the way to customize the firmware and extend the module with non-standard functions. There are several communication interfaces, protocols and special functionalities available on request, such as ADS-B/Out (digital data). For more information please contact: support@aerobits.pl.

APPLICATIONS

- SAA / DAA (Sense and Avoid / Detect and Avoid)
- UAS ground stations and high-density traffic surveillance
- UTM / U-Space construction (traffic surveillance network)
- Traffic-flow analysis and statistics
- Monitoring of 1090MHz band (signal integrity check)
- ADS-B/In/Out devices that meet the NextGen/SESAR philosophy
- Etc.

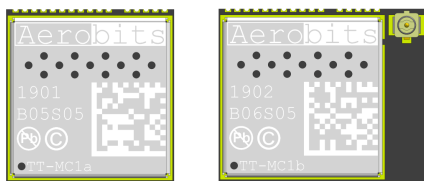

FEATURES

- Fastest ADS-B implementation on a surface of <4cm²
- Receiving of ADS-B, Mode-A/C/S with RF signal strength/quality analysis
- Time stamp (raw data only) for multilateration
- High-resolution ADC with real-time signal processing; best-in-class aircraft tracking
- High sensitive front-end, jamming and ESD protection (only TT-MC1b) with ranges over 300 km (open space, 1dBi antenna)
- Simple module integration via UART interface and AT commands
- Multiple supported protocols, i.a. MAVLink, GDL90
- Scalable OEM solution with enormous customization potential (additional functions or interfaces on request)
- Firmware update capability (uC and FPGA)
- Power consumption 5V/60mA (RF part), 3.3V/200mA (digital part)
- Small outline: 18.0 x 19.0 x 2.65mm, ver. (a); 22.5 x 19.0 x 2.65mm, ver. (b), weight < 2g
- Designed to meet MOPS defined in TSO-C199

ORDERING INFORMATION

Type	Symbol	Description
OEM Module	TT-MC1a	Without antenna connector
OEM Module	TT-MC1b	With antenna connector (U.FL)
Evaluation kit	EVAL-TT-MC1	Based on TT-MC1a

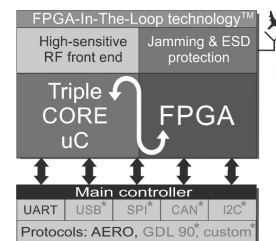


Figure 1: Structure, interfaces and protocols of TT-MC1 series.
*on request only (custom solutions)

CONTENTS

1	ELECTRICAL CHARACTERISTICS	4
2	PIN DEFINITION	5
3	PRINCIPLE OF OPERATION	7
3.1	STATES OF OPERATION	7
3.1.1	BOOTLOADER STATE	7
3.1.2	RUN STATE	7
3.1.3	CONFIGURATION STATE	7
3.2	TRANSITIONS BETWEEN STATES	7
3.2.1	BOOTLOADER TO RUN TRANSITION	7
3.2.2	RUN TO CONFIGURATION TRANSITION	8
3.2.3	CONFIGURATION TO RUN TRANSITION	8
3.2.4	CONFIGURATION TO BOOTLOADER TRANSITION	8
4	UART CONFIGURATION	9
5	SETTINGS	10
5.1	WRITE SETTINGS	10
5.2	READ SETTINGS	10
5.3	SETTINGS DESCRIPTION	10
5.4	ERRORS	10
5.5	COMMAND ENDINGS	10
5.6	UPPERCASE AND LOWERCASE	11
5.7	AVAILABLE SETTINGS	11
5.8	EXAMPLE	11
6	COMMANDS	12
6.1	COMMANDS IN BOOTLOADER AND CONFIGURATION STATE	12
6.1.1	AT+LOCK	12
6.1.2	AT+BOOT	12
6.2	COMMANDS IN CONFIGURATION STATE	12
6.2.1	AT+CONFIG	12
6.2.2	AT+SETTINGS?	12
6.2.3	AT+HELP	12
6.2.4	AT+SETTINGS_DEFAULT	13
6.2.5	AT+SERIAL_NUMBER	13
6.2.6	AT+FIRMWARE_VERSION	13
6.2.7	AT+REBOOT	13
6.2.8	AT+REBOOT_BOOTLOADER	13
6.3	COMMANDS IN RUN STATE	13
7	CSV PROTOCOL (AERO)	14
7.1	CRC	14
7.2	ADS-B AIRCRAFT MESSAGE	14
7.3	STATISTICS MESSAGE	16
7.4	CALIBRATION OF RAW FRAMES	17
8	RAW PROTOCOL	18
8.1	MODE-S RAW FRAMES	18
8.2	MODE-AC RAW FRAMES	18
9	MAVLINK PROTOCOL	20

9.1 ADS-B AIRCRAFT MESSAGE	20
10 ASTERIX PROTOCOL	21
11 GDL90 PROTOCOL	22
12 MINIMUM INTEGRATION RECOMMENDATION	23
13 MECHANICAL DRAWING	24
14 RECOMMENDED LAYOUT	25
15 REVISION HISTORY	26

1 ELECTRICAL CHARACTERISTICS

Absolute Maximum Ratings			
Parameter	Min.	Max.	Unit
Storage temperature	-40	+85	°C
Supply voltage (VCC1)	2.7	3.6	DCV
Supply voltage (VCC2)	4.0	5.5	DCV
Other pin voltage	VSS-0.4	VCC + 0.4	DCV
RF input power	-	+10	dBm
Recommended Operating Conditions			
Parameter	Min.	Max.	Unit
Temperature	-40	+70	°C
Supply voltage (VCC1)	3.0	3.6	DCV
Supply voltage (VCC2)	4.5	5.5	DCV

Table 1: Absolute maximum ratings and recommended operation conditions.

General Electrical Specification					
Parameter	Description	Min.	Typ.	Max.	Unit
Carrier frequency		-	1090	-	MHz
RX sensitivity	For operation at 50Ω U.fl connector (TT-MC1b)	-	-85	-	dBm
Input Low Voltage	RESET, UARTs, CAN, USB, SPI, I2C	-0.3	-	0.8	DCV
Input High Voltage	RESET, UARTs, CAN, USB, SPI, I2C, GPIO	0.7 VCC1	-	VCC1 + 0.3	DCV
Output Low Voltage	UARTs, CAN, USB, I2C, SPI, GPIO	-	-	0.4	DCV
Output High Voltage	UARTs, CAN, USB, I2C, SPI, GPIO	VCC1 - 0.4	-	-	DCV
Current consumption (digital part)		-	200	-	mA
Current consumption (RF front end)		-	60	-	mA

Table 2: General electrical specification.

2 PIN DEFINITION

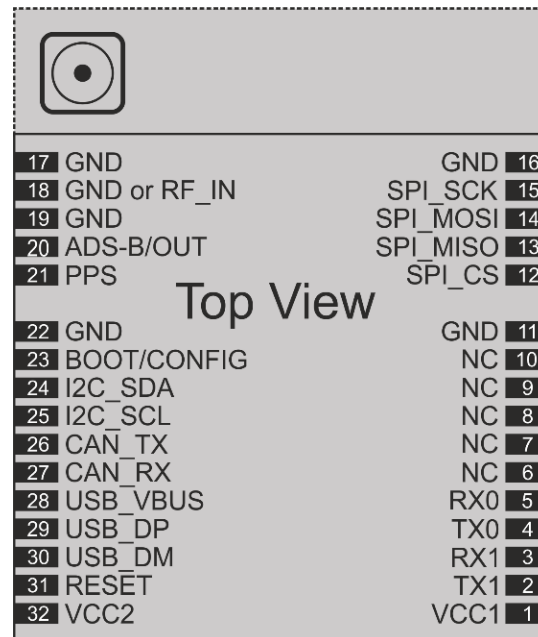


Figure 2: Pin assignment for TT-MC1 series.

NOTE: The pins which are grayed-out in table 3 (e.g. I2C, SPI, CAN interfaces) are not used in standard design and are reserved for custom firmware implementations.

Pin No.	Pin Name	Pin Type	Description
1	VCC1	Power	3.3V (digital supply)
2	TX1	CMOS Output	UART1 data output
3	RX1	CMOS Input	UART1 data input
4	TX0	CMOS Output	UART0 data output
5	TX1	CMOS Input	UART0 data input
6	NC	Reserved	Keep floating
7	NC	Reserved	Keep floating
8	NC	Reserved	Keep floating
9	NC	Reserved	Keep floating
10	NC	Reserved	Keep floating
11	GND	GND	Common ground
12	SPI_CS	CMOS Output	Serial Peripheral Interface / chip select
13	SPI_MISO	CMOS Input	Serial Peripheral Interface / data input
14	SPI_MOSI	CMOS Output	Serial Peripheral Interface / data output
15	SPI_SCK	CMOS Output	Serial Peripheral Interface / clock
16	GND	GND	Common ground
17	GND	GND	Common ground
18	TT-MC1a	RF_IN	RF Input
	TT-MC1b	GND	Common ground
19	GND	GND	Common Ground
20	ADSB_OUT	CMOS Output	ADS-B Output (digital)
21	PPS	CMOS Input	1PPS GNSS signal
22	GND	GND	Common ground

Pin No.	Pin Name	Pin Type	Description
23	BOOT/CONFIG	CMOS Input	Bootloader / Configuration mode
24	I2C_SDA	Bi-directional	I2C Data line
25	I2C_SCL	Bi-directional	I2C Clock line
26	CAN_TX	CMOS Output	CAN transmit
27	CAN_RX	CMOS Input	CAN receive
28	USB_VBUS	Power	USB Power line
29	USB_DP	Bi-directional	USB+
30	USB_DM	Bi-directional	USB-
31	RESET	CMOS Input	Reset input / active low
32	VCC2	Power	5V (RF front end supply)

Table 3: TT-MC1 Pinout.

3 PRINCIPLE OF OPERATION

During work module goes through multiple states. In each state operation of the module is different. Each state and each transition is described in paragraphs below.

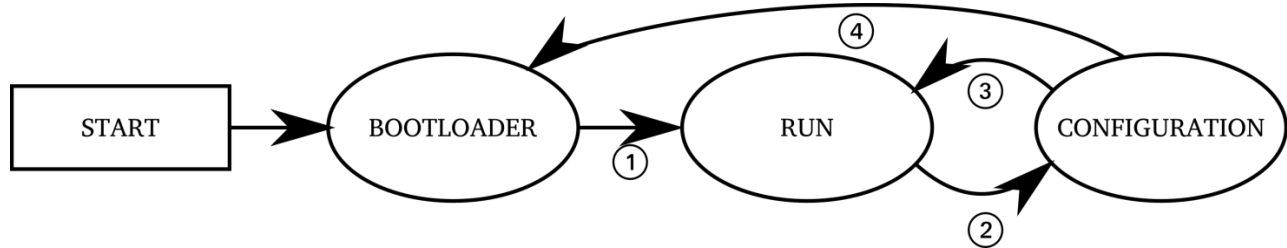


Figure 3: State machine of TT-MC1 module.

3.1 STATES OF OPERATION

3.1.1 BOOTLOADER STATE

This is an initial state of TT-MC1 module after restart. Firmware update is possible here. Typically module transits automatically to RUN state. It is possible to lock module in this state (prevent transition to RUN state) using one of BOOTLOADER triggers. UART baud is constant and is set to 115200bps. After powering up module, it stays in this state for up to 3 seconds. If no BOOTLOADER trigger is present, module will transit to RUN state. Firmware upgrade is possible using Micro ADS-B App software. For automated firmware upgrading scenarios, aerobits_updater software is available. To acquire this program please contact: support@aerobits.pl.

3.1.2 RUN STATE

In this state module is working and receiving the data from aircrafts. It uses selected protocol to transmit received and decoded data to the host system. In this state of operation module settings are loaded from non-volatile internal memory, including main UART interface's baud.

3.1.3 CONFIGURATION STATE

In this mode change of stored settings is possible. Operation of the module is stopped and baud is set to fixed 115200bps. Change of settings is done by using AT-commands. Changes to settings are stored in non-volatile memory on exiting this state. Additional set of commands is also available in this state, allowing to e.g. reboot module into BOOTLOADER state, check serial number and firmware version. It is possible to lock module in this state (similarly to BOOTLOADER) using suitable command.

3.2 TRANSITIONS BETWEEN STATES

For each of state transitions, different conditions must be met, which are described below. Generally, the only stable state is RUN. Module always tends to transit into this state. Moving to other states requires host to take some action.

3.2.1 BOOTLOADER TO RUN TRANSITION

BOOTLOADER state is semi-stable: the module requires additional action to stay in BOOTLOADER state. The transition to RUN state will occur automatically after short period of time if no action will be taken. To prevent transition from BOOTLOADER state, one of following actions must be processed:

- Pull BOOT/CONFIG pin low during start of module

- Send AT+LOCK=1 command while device is in BOOTLOADER state (always after power on for up to 3s)
- Send AT+REBOOT_BOOTLOADER command in CONFIGURATION state. This will move to BOOTLOADER state and will lock module in this state.

If none of above conditions are met, the module will try to transit into RUN state. Firstly it will check firmware integrity. When firmware integrity is confirmed, module will transit into RUN state, if not, it will stay in BOOTLOADER state.

To transit into RUN state:

- Release or pull high BOOT/CONFIG pin
- If module is locked, send AT+LOCK=0 command

When module enters RUN mode it will send AT+RUN_START command.

3.2.2 RUN TO CONFIGURATION TRANSITION

To transit from RUN into CONFIGURATION state, host should do one of the following:

- Pull BOOT/CONFIG pin low
- Send AT+CONFIG=1 (using current baud). This method is not recommended, because module will support multiple protocols in future and Aerobits Sp. z o.o. cannot ensure that this command will be present in all protocols.

When module leaves RUN state it sends AT+RUN_END message, then AT+CONFIG_START message on entering CONFIGURATION state. The former is sent using baud from settings, the latter always uses 115200bps baud.

3.2.3 CONFIGURATION TO RUN TRANSITION

To transit from CONFIGURATION into RUN state, host should do one of the following:

- Release or pull high BOOT/CONFIG pin
- Send AT+CONFIG=0 command.

When module leaves CONFIGURATION state it sends AT+CONFIG_END message, then AT+RUN_START message on entering RUN state. The former is always sent using 115200bps baud, the latter uses baud from settings.

3.2.4 CONFIGURATION TO BOOTLOADER TRANSITION

To transit from CONFIGURATION into BOOTLOADER state, host should do one of the following:

- Send AT+REBOOT_BOOTLOADER command.
- Send AT+REBOOT and when module enters BOOTLOADER state, prevent transition to RUN state.

When entering the bootloader state, the module sends AT+BOOTLOADER_START .

4 UART CONFIGURATION

Communication between module and host device is done using UART interface.

In CONFIGURATION and BOOTLOADER state transmission baud is fixed at 115200bps.

The UART interface uses settings as described in table 4.

UART Settings				
Parameter	Min.	Typ.	Max	Unit
Baud	115200	115200	3000000	bps
Stop Bits Number	-	1	-	-
Flow Control	-	None	-	-
Parity Bit	-	None	-	-

Table 4: UART settings.

5 SETTINGS

In RUN state, operation of the module is determined based on stored settings. Settings can be changed in CONFIGURATION state using AT-commands. Settings can be written and read.

NOTE: New values of settings are saved in non-volatile memory when transitioning from CONFIGURATION to RUN state.

Settings are restored from non-volatile memory during transition from BOOT do RUN state. If settings become corrupted due to memory fault, power loss during save, or any other kind of failure, the settings restoration will fail, loading default values and displaying the AT+ERROR (Settings missing, loaded default) message as a result. This behavior will occur for each device boot until new settings are written by the user.

5.1 WRITE SETTINGS

After writing a new valid value to a setting, an AT+OK response is always sent.

AT+SETTING=VALUE

For example AT+PROTOCOL=1

Response: AT+OK

5.2 READ SETTINGS

AT+SETTING?

For example: AT+PROTOCOL?

Response: AT+PROTOCOL=1

5.3 SETTINGS DESCRIPTION

AT+SETTING=?

For example: AT+PROTOCOL=?

Response:

Setting: PROTOCOL

Description: Selected protocol (0: NONE, 2: CSV, 3: MAVLINK)

Type: Integer decimal

Range (min.): 0

Range (max.): 5

Is preserved: 1

Is restart needed: 0

5.4 ERRORS

Errors are reported using following structure:

AT+ERROR (DESCRIPTION)

DESCRIPTION is optional and contains information about error.

5.5 COMMAND ENDINGS

Every command must be ended with one of the following character sequences: “\n”, “\r” or “\r\n”. Commands without suitable ending will be ignored.

5.6 UPPERCASE AND LOWERCASE

All characters (except preceding AT+) used in command can be both uppercase and lowercase, so following commands are equal:

AT+PROTOCOL?

AT+pRoToCoL?

NOTE: This statement is true in configuration state, not in bootloader state. in bootloader state all letters must be uppercase.

5.7 AVAILABLE SETTINGS

Setting	Min value	Max value	Default value	Comment
BAUDRATE	0	2	0	Baudrate in RUN state 0 - 115200bps 1 - 921600bps 2 - 3000000bps
PROTOCOL	0	6	2	Selected protocol. Not all values are valid for all devices. 0 - None 1 - RAW HEX 2 - CSV (AERO) 3 - MAVLink 4 - ASTERIX 5 - GDL90
SUBPROTOCOL	0	0	0	Reserved for future use

Table 5: Settings

5.8 EXAMPLE

As an example, to switch TT-MC1 module to CSV protocol, one should send following commands. “<<” indicates command sent to module, “>>” is a response.

```
<< AT+CONFIG=1\r\n
>> AT+OK\r\n
<< AT+PROTOCOL=2\r\n
>> AT+OK\r\n
>> AT+OK\r\n
<< AT+CONFIG=0\r\n
```

6 COMMANDS

Apart from settings, module supports set of additional commands. Format of this commands are similar to those used for settings, but they do not affect operation of module in RUN state.

6.1 COMMANDS IN BOOTLOADER AND CONFIGURATION STATE

6.1.1 AT+LOCK

AT+LOCK=1 - Set lock to enforce staying in BOOTLOADER or CONFIGURATION state

AT+LOCK=0 - Remove lock

AT+LOCK? - Check if lock is set

6.1.2 AT+BOOT

AT+BOOT? - Check if module is in BOOTLOADER state

Response:

AT+BOOT=0 - module in CONFIGURATION state

AT+BOOT=1 - module in BOOTLOADER state

6.2 COMMANDS IN CONFIGURATION STATE

6.2.1 AT+CONFIG

AT+CONFIG=0 - Transition to RUN state.

AT+CONFIG? - Check if module is in CONFIGURATION state.

Response:

AT+CONFIG=0 - module in RUN state

AT+CONFIG=1 - module in CONFIGURATION state

6.2.2 AT+SETTINGS?

AT+SETTINGS? - List all settings. Example output:

AT+PROTOCOL=2

AT+SUBPROTOCOL=0

AT+BAUDRATE=0

6.2.3 AT+HELP

AT+HELP - Show all settings and commands with descriptions. Example output:

SETTINGS:

AT+PROTOCOL=2 [Selected protocol (0: NONE, 2: CSV, 3: MAVLINK)]

AT+SUBPROTOCOL=0 [Subprotocol of selected protocol]

COMMANDS:

AT+HELP [Show this help]

AT+TEST [Responds "AT+OK"]

AT+SETTINGS_DEFAULT [Load default settings]

AT+REBOOT [Reboot system]

6.2.4 AT+SETTINGS_DEFAULT

AT+SETTINGS_DEFAULT - Set all settings to their default value.

6.2.5 AT+SERIAL_NUMBER

AT+SERIAL_NUMBER? - Read serial number of module.

Response:

- For older devices: AT+SERIAL_NUMBER=0202041E43
- For newer devices: AT+SERIAL_NUMBER=07-0001337

6.2.6 AT+FIRMWARE_VERSION

AT+FIRMWARE_VERSION? - Read firmware version of module.

Response:

AT+FIRMWARE_VERSION=10101017 (May 11 2018)

6.2.7 AT+REBOOT

AT+REBOOT - Restart module.

6.2.8 AT+REBOOT_BOOTLOADER

AT+REBOOT_BOOTLOADER - Restart module to BOOTLOADER state.

NOTE: This command also sets lock.

6.3 COMMANDS IN RUN STATE

AT+CONFIG=1 - transition to CONFIGURATION state.

NOTE: This command also sets lock.

7 CSV PROTOCOL (AERO)

CSV protocol is simple text protocol, that allows fast integration and analysis of tracked aircrafts. CSV messages start with '#' character and ends with "\r\n" characters. There are following types of messages:

1. ADS-B Aircraft message,
2. Statistics message.

NOTE: In future versions, additional comma-separated fields may be introduced to any CSV protocol message, just before CRC field, which is guaranteed to be at the end of message. All prior fields are guaranteed to remain in same order.

7.1 CRC

Each CSV message includes CRC value for consistency check. CRC value is calculated using standard CRC16 algorithm and its value is based on every character in frame starting from '#' to last comma ',' (excluding last comma). After calculation, value is appended to frame using hexadecimal coding. Example function for calculating CRC is shown below.

```
uint16_t crc16(const uint8_t* data_p, uint32_t length){
    uint8_t x;
    uint16_t crc = 0xFFFF;
    while (length--){
        x = crc>>8 ^ *data_p++;
        x ^= x>>4;
        crc = (crc<<8) ^ ((uint16_t)(x<<12)) ^ ((uint16_t)(x<<5)) ^ ((uint16_t)x);
    }
    return swap16(crc);
}
```

7.2 ADS-B AIRCRAFT MESSAGE

This message describes state vector of aircraft determined from ADS-B messages and is sent once per second. The message format is as follows:

```
#A:ICAO,FLAGS,CALL,SQ,LAT,LON,ALT_BARO,TRACK,
VELH,VELV,SIGS,SIGQ,FPS,NICNAC,ALT_GEO,ECAT,CRC\r\n
```

#A	Aircraft message start indicator	Example value
ICAO	ICAO number of aircraft (3 bytes)	3C65AC
FLAGS	Flags bitfield, see table 7	1
CALL	Callsign of aircraft	N61ZP
SQ	SQUAWK of aircraft	7232
LAT	Latitude, in degrees	57.57634
LON	Longitude, in degrees	17.59554
ALT_BARO	Barometric altitude, in feet	5000
TRACK	Track of aircraft, in degrees [0,360)	35
VELH	Horizontal velocity of aircraft, in knots	464
VELV	Vertical velocity of aircraft, in ft/min	-1344
SIGS	Signal strength, in mV	840
SIGQ	Signal quality, in mV	72
FPS	Number of raw MODE-S frames received from aircraft during last second	5
NICNAC	NIC/NAC bitfield, see table 8 (v2.6.0+)	31B
ALT_GEO	Geometric altitude, in feet (v2.6.0+)	5000
ECAT	Emitter category, see table 9 (v2.7.0+)	14
CRC	CRC16 (described in CRC section)	2D3E

Table 6: Descriptions of ADS-B message fields.

Value	Flag name	Description
0x0001	PLANE_ON_THE_GROUND	The aircraft is on the ground
0x0002	PLANE_IS_MILITARY	The aircraft is military object
0x0100	PLANE_UPDATE_ALTITUDE_BARO	During last second, barometric altitude of this aircraft was updated
0x0200	PLANE_UPDATE_POSITION	During last second, position (LAT & LON) of this aircraft was updated
0x0400	PLANE_UPDATE_TRACK	During last second, track of this aircraft was updated
0x0800	PLANE_UPDATE_VELO_H	During last second, horizontal velocity of this aircraft was updated
0x1000	PLANE_UPDATE_VELO_V	During last second, vertical velocity of this aircraft was updated
0x2000	PLANE_UPDATE_ALTITUDE_GEO	During last second, geometric altitude of this aircraft was updated

Table 7: ADS-B message Flags description.

The NIC/NAC bitfield is transmitted in big endian hexadecimal format without leading zeros. Table 8 describes its bitfield layout. The meaning of NIC/NAC indicators is exactly the same as described in ED-102A.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Reserved				NAC _p				NAC _v			NIC _{baro}	NIC			

Table 8: Structure of NIC/NAC bitfield in CSV protocol.

Below is a list of emitter category values returned in ECAT field.

ECAT value	Description
0	Unknown.
1	Light (below 15500 lbs.).
2	Small (15500 - 75000 lbs.).
3	Large (75000 - 300000 lbs.).
4	High-Vortex Large (aircraft such as B-757).
5	Heavy (above 300000 lbs.).
6	High performance (above 5g acceleration and above 400 knots).
7	Rotorcraft.
8	Reserved.
9	Glider, Sailplane.
10	Lighter-Than-Air.
11	Parachutist, Skydiver.
12	Ultralight, hang-glider, paraglider.
13	Reserved.
14	Unmanned Aerial Vehicle.
15	Space, Trans-atmospheric Vehicle.
16	Reserved.
17	Surface Vehicle - Emergency Vehicle.
18	Surface Vehicle - Service Vehicle.
19	Point Obstacle (includes Tethered Ballons).
20	Cluster obstacle.
21	Line obstacle.

Table 9: ADS-B emitter category values in CSV protocol.

If data of any field of frame is not available, then it is transmitted as empty. For example:

```
#A:4CA948,300,,2122,52.99750,13.76526,37000,169,442,0,814,72,3,,6F1C\r\n
#A:424313,,2362,52.43431,14.84535,37000,65,456,0,806,61,0,,6843\r\n
```

NOTE: SIGS and SIGQ fields are updated based on raw MODE-S frames. They are calculated from frames received in last second. If there were no receiver frames (FPS=0), those fields will not be updated.

NOTE: SIGS is measured based on analog RF signal. This signal has DC offset of about 700mV.

7.3 STATISTICS MESSAGE

This message contains some useful statistics about operation of module. Format of that frame is shown below:

```
#S:CPU,RES,RES,FPSS,FPSAC,TSCAL,CRC
```


#S	Statistics message start indicator	Example
CPU	CPU load in %	12.1
RES	Reserved for future use	-
RES	Reserved for future use	-
FPSS	Number of MODE-S frames received in last second	3
FPSAC	Number of MODE-A or MODE-C frames received in last second	35
TSCAL	Calibration value for TS field in raw frames	13999415
CRC	CRC16 (described in CRC section)	2D3E

Table 10: Statistics message fields.

NOTE: TSCAL field is available when precise PPS signal from GNSS source is applied to module to 1PPS pin.

7.4 CALIBRATION OF RAW FRAMES

To get precise time, TS field from raw frames must be calibrated using TSCAL field from statistics message. This allow obtaining precise time which have passed between most recent PPS pulse and reception of that particular frame.

$$TS_{CALIB}[ns] = \frac{TS}{TSCAL} \frac{1s}{10^9}$$

8 RAW PROTOCOL

This protocol is dedicated for raw Mode-A/C/S frames acquisition. In this special mode of operation, output frames are not processed, nor validated in any way. All processing, checksum validation, etc. must be done on user's side. All raw frames, regardless of type, start with '*' and end with ';' ASCII characters, whereas their content is encoded in hexadecimal format, MSB first. At the end, extended fields are appended to frame.

```
*RAW_FRAME; (SIGS, SIGQ, TS) \r\n
```

Var.	Description	Example
SIGS	Signal strength in mV	840
SIGQ	Signal quality in mV	72
TS	Timestamp for multilateration. Time from last PPS pulse in hex format.	20CB3

Table 11: Extended messages description.

NOTE: To use multilateration, TS value must be calibrated using calibration value from statistics message.

NOTE: TS field is available when precise PPS signal from GNSS source is applied to module to 1PPS pin.

8.1 MODE-S RAW FRAMES

Short and long frames consist accordingly of 7 or 14 data bytes. Examples of raw MODE-S frames:

- Short frame: `*5D4B18FFFC710B; (899, 58, 20CB3) \r\n`
- Long frame: `*8D4CA7E858B9838206BA422BBD7B; (995, 164, 20CB3) \r\n`

8.2 MODE-AC RAW FRAMES

NOTE: It is impossible to reliably distinguish between MODE-A and MODE-C frames based only on received signal on 1090MHz.

Starting with firmware 2.7.0, each frame is interpreted as squawk and formatted as 4 octal digits. They can also be read as binary frame with 4 hexadecimal digits, with bits being set as shown in table below.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	A4	A2	A1		B4	B2	B1		C4	C2	C1		D4	D2	D1

Table 12: Description of bits in raw Mode-A/C frames in new protocol version.

Examples of raw MODE-A/C frames using this format are as follows:

- `*0363; (979, 151, 20CB3) \r\n`
- `*7700; (995, 167, 20CB3) \r\n`

In firmwares prior to 2.7.0, each frame consists of 2 data bytes formatted as 4 hexadecimal digits. Individual bits directly correspond to pulses transmitted in Mode-A/C frame.

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
C1	A1	C2	A2	C4	A4	B1	D1	B2	D2	B4	D4				SPI

Table 13: Description of bits in raw Mode-A/C frames in old protocol version.

Examples of raw MODE-AC frames using this format are shown below.

- *6611; (979,151,20CB3) \r\n
- *E3E0; (995,167,20CB3) \r\n

9 MAVLINK PROTOCOL

TT-MC1 can be switched to use MAVLink protocol. This can be achieved by altering PROTOCOL setting. When MAVLink protocol is used, module is sending list of aircrafts every second. MAVLink messages have standardized format, which is well described on official protocol webpage (mavlink.io/en/messages).

9.1 ADS-B AIRCRAFT MESSAGE

Aircrafts are encoded using ADSB_VEHICLE message (mavlink.io/en/messages/common.html#ADSB_VEHICLE). MAVLink message contains several data fields which are described below.

Field Name	Type	Description
ICAO_address	uint32_t	ICAO address
lat	int32_t	Latitude, expressed as degrees * 1E7
lon	int32_t	Longitude, expressed as degrees * 1E7
altitude_type	uint8_t	Type from ADSB_ALTITUDE_TYPE enum
altitude	int32_t	Barometric/Geometric Altitude (ASL), in millimeters
heading	uint16_t	Course over ground in centidegrees
hor_velocity	uint16_t	The horizontal velocity in centimeters/second
ver_velocity	uint16_t	The vertical velocity in centimeters/second, positive is up
callsign	char[9]	The callsign, 8 chars + NULL
emitter_type	uint8_t	Type from ADSB_EMITTER_TYPE enum
tslc	uint8_t	Time since last communication in seconds
flags	uint16_t	Flags to indicate various statuses including valid data fields
squawk	uint16_t	Squawk code

Table 14: MAVLink ADSB_VEHICLE message description

The ADS-B vehicle may transmit barometric, as well as geometric altitude. The SUBPROTOCOL setting allows for toggling altitude transmit priority:

- When set to 0, altitude field will be filled with geometric altitude first. If not available, barometric altitude will be used.
- When set to 1, barometric altitude will be preferred.

10 ASTERIX PROTOCOL

TT-MC1 can be switched to use ASTERIX binary protocol. This can be achieved by altering PROTOCOL setting. When ASTERIX protocol is used, module is sending list of aircrafts every second. Aircrafts are encoded using I021 ver. 2.1 message. Also, once per second the device sends a heartbeat message using I023 ver. 1.2 format in Ground Station Status variant.

For further reference of parsing ASTERIX frames, please see relevant official documentation:

- I021 messages: [CAT021 - EUROCONTROL Specification for Surveillance Data Exchange Part 12: Category 21](#)
- I023 messages: [CAT023 - EUROCONTROL Specification for Surveillance Data Exchange Part 16: Category 23](#)

11 GDL90 PROTOCOL

TT-MC1 can be configured to use GDL90 binary protocol. This can be achieved by altering PROTOCOL setting. When GDL90 protocol is used, module is sending list of aircrafts every second. Aircrafts are encoded using Traffic Report (#20) message. Also, once per second device sends Heartbeat (#0), Ownship Report (#10) and Ownship Geometric Altitude (#11) messages.

For further reference of parsing GDL90 frames see relevant documentation: [GDL90 Data Interface Specification](#).

The ADS-B vehicle may transmit barometric, as well as geometric altitude. The SUBPROTOCOL setting allows for toggling Traffic Report altitude transmit priority:

- When set to 0, altitude field will be filled with geometric altitude first. If not available, barometric altitude will be used.
- When set to 1, barometric altitude will be preferred.

12 MINIMUM INTEGRATION RECOMMENDATION

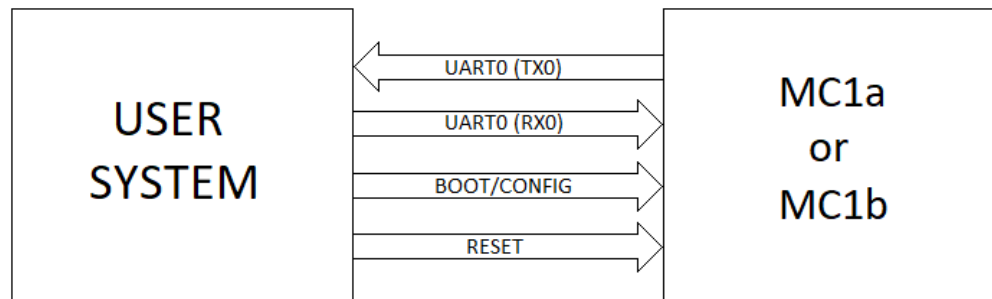


Figure 4: Example of basic TT-MC1 integration with user MCU.

13 MECHANICAL DRAWING

All dimensions are in mm.

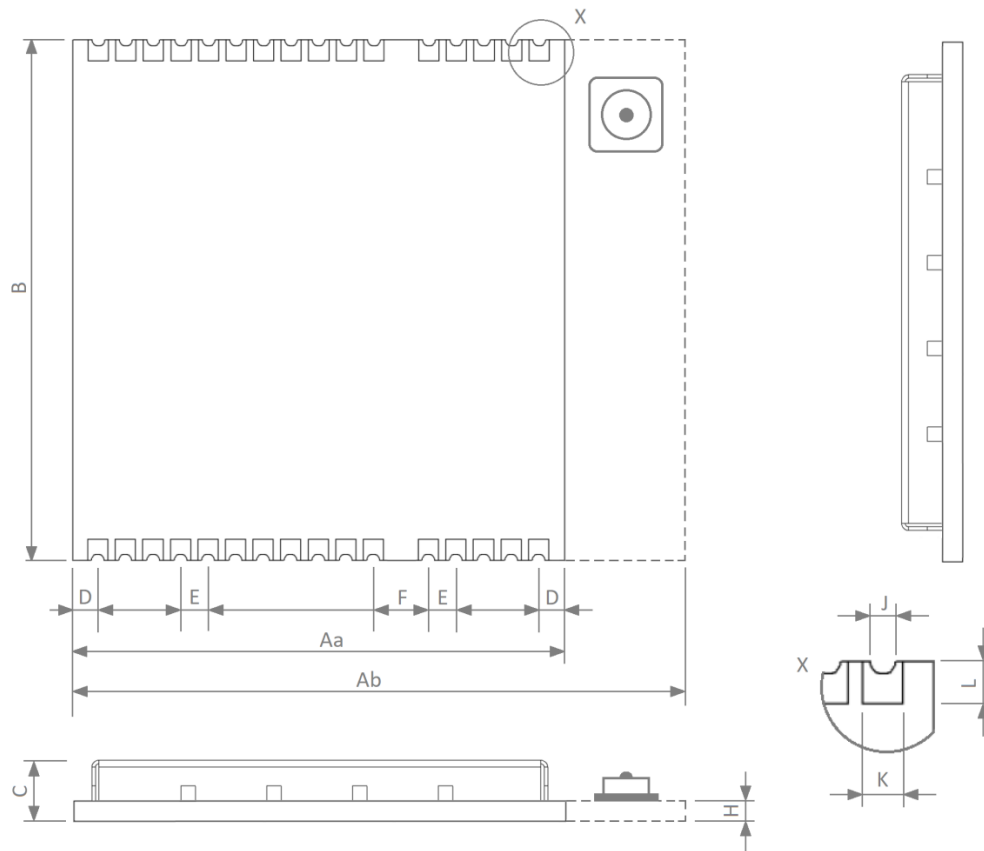


Figure 5: Dimensions.

Symbol	Min. (mm)	Typ. (mm)	Max. (mm)
Aa (TT-MC1a)	17.9	18.0	18.1
Ab (TT-MC1b)	22.4	22.5	22.6
B	18.9	19.0	19.1
C	2.55	2.65	2.75
D	0.9	1.0	1.1
E	0.9	1.0	1.1
F	1.9	2.0	2.1
H	0.6	0.7	0.8
J	0.4	0.5	0.6
K	0.6	0.7	0.8
L	0.7	0.8	0.9

Table 15: Dimensions and tolerances.

14 RECOMMENDED LAYOUT

All dimensions are in mm.

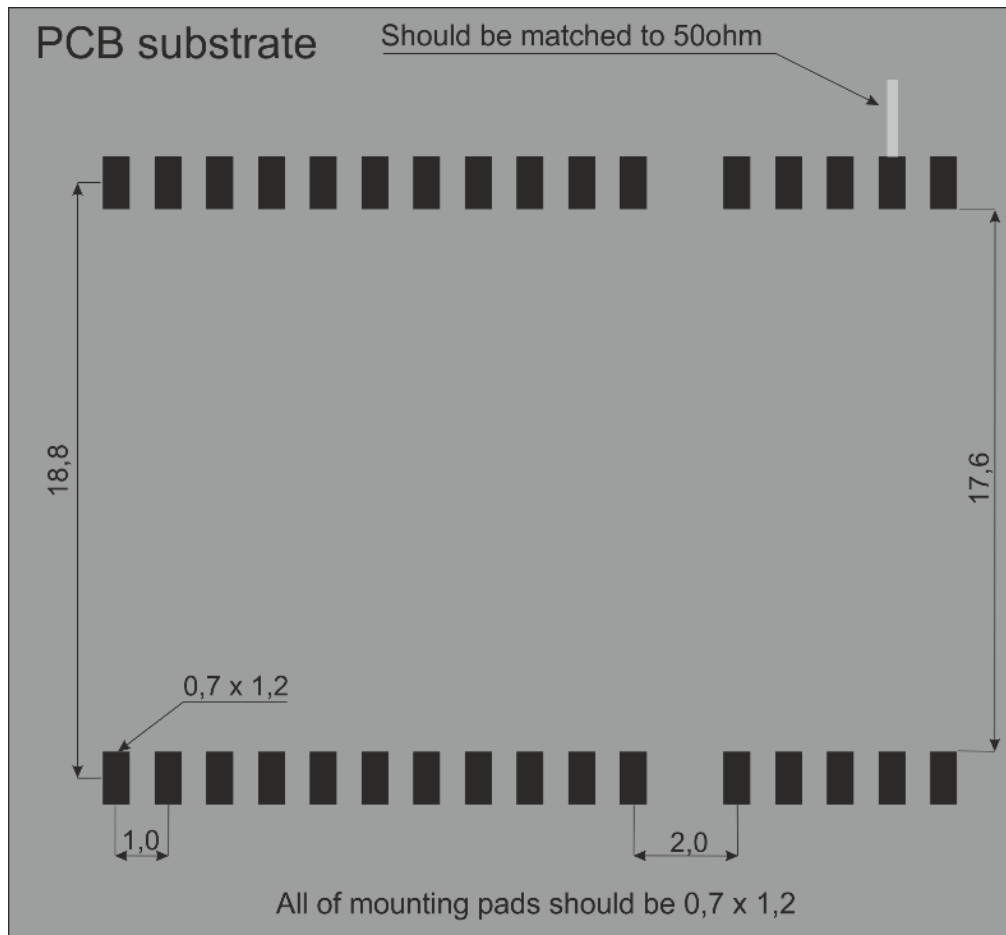


Figure 6: Recommended footprint.

NOTE: In case of TT-MC1a the RF input (pad 18) should be matched to 50ohm.

15 REVISION HISTORY

Date	Revision	Changes
10-May-2018	1	Initial release.
24-May-2018	2	Corrected inconsistencies.
05-Nov-2019	3	Described ASTERIX and GDL protocols, changed AT+PROTOCOL description, described AT+SETTING?= syntax and AT+HELP command
28-Sep-2020	4	Elaborated description of saving and restoring settings, added information about settings load error.
06-Oct-2020	5	Described NIC/NAC field in CSV protocol.
13-Oct-2020	6	Added geometric altitude field to CSV protocol, added SUBPROTOCOL notes for MAVLink and GDL90 protocols.
9-Nov-2020	7	Added ECAT field to CSV protocol. Added description from which version new CSV fields were introduced. Described new format of Mode-A/C frames in RAW protocol.
19-Nov-2020	8	Added information about ASTERIX CAT023 version being transmitted by device.
07-Jan-2021	9	Corrected “RF input power” field value in Absolute Maximum Ratings section.

Table 16: Document revision history.

Please read carefully

Information contained in this document is provided solely in connection with Aerobits products. Aerobits reserves the right to make changes, corrections, modifications or improvements to this document, and to products and services described herein at any time, without notice. All Aerobits products are sold pursuant to our own terms and conditions of sale. Buyers are solely responsible for the choice, selection and use of the Aerobits products and services described herein, and Aerobits assumes no liability whatsoever, related to the choice, selection or use of Aerobits products and services described herein. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services, it shall not be deemed a license granted by Aerobits for use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering use, in any manner whatsoever, of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN AEROBITS TERMS AND CONDITIONS OF SALE, AEROBITS DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO USE AND/OR SALE OF AEROBITS PRODUCTS INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT. UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED AEROBITS REPRESENTATIVE, AEROBITS PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE.

Information in this document supersedes and replaces all previously supplied information.

© 2021 Aerobits - All rights reserved